

# Mobilift 0049

## Accessories



Remote holder



RF Remote




Wheels 2pcs




Wheels with brake 2pcs



Threaded pin



Spanner 17mm




Lubricator

## Important information



**Not for children under 6 years old.**  
All older children can use Lift, only under adult supervision.

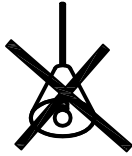

### **WARNING!** Crushing Risk


While using, the space above and below screen must be free.

UP


DOWN

Before using remember to lock wheel brakes.


**LOCK!!!**

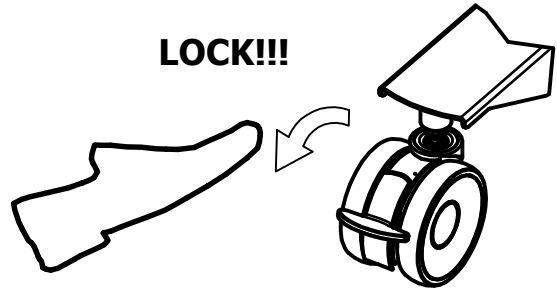


Press UP button to move screen higher.

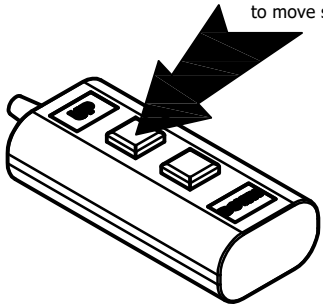

Press DOWN button to move screen lower.

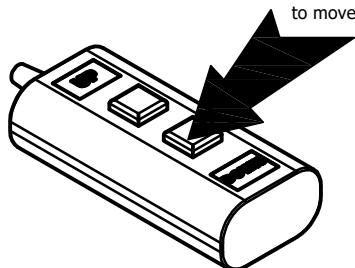

**DON'T  
PUSH**


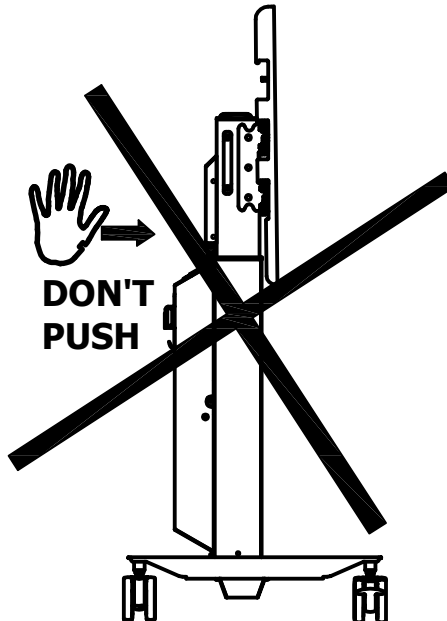


# Max LOAD


**130Kg**



Never Transport while lift is up or there is connected main plug.

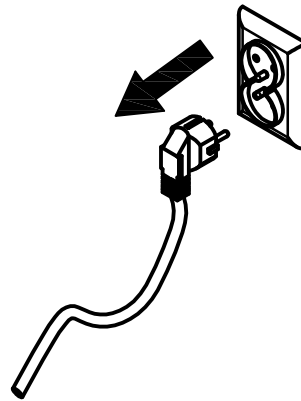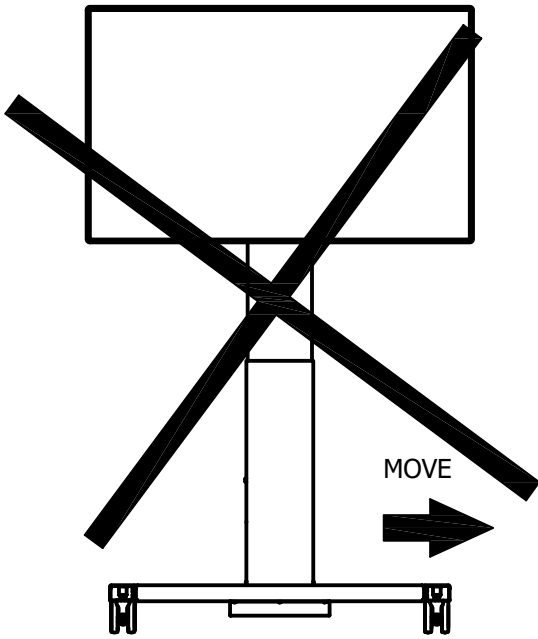


**Disconnect before  
move !!!**


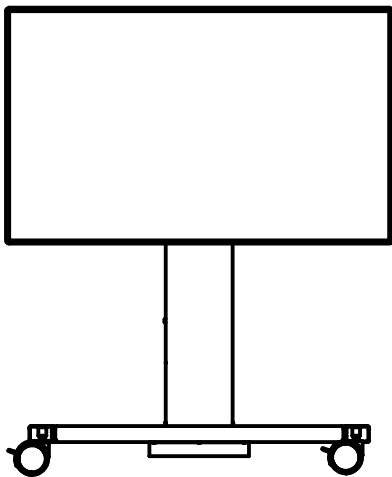


**Transport directions**


**Always use handles  
to transport**

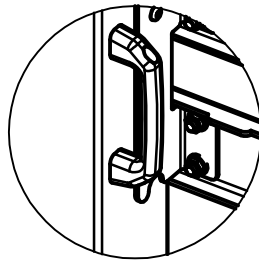

**Max 5°!!!**

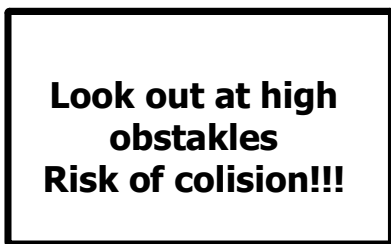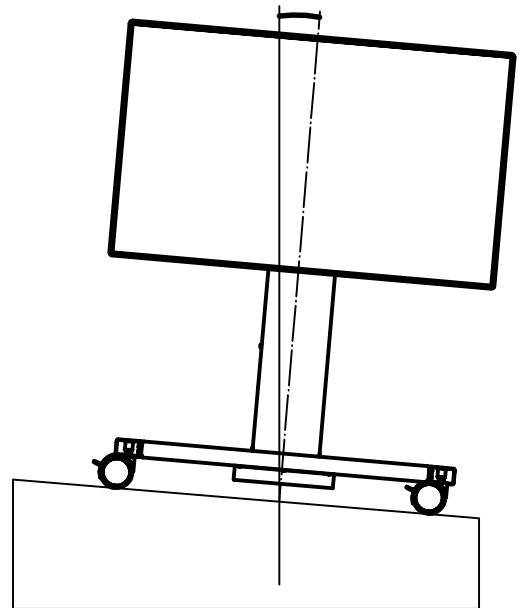


**Look out at high  
obstakles  
Risk of colision!!!**

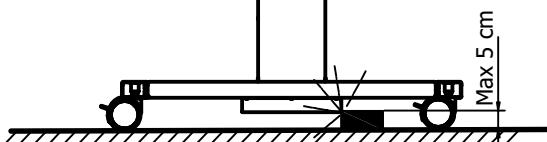


Max 5 cm

Before transporting remember to  
unlock wheel brakes.


**UNLOCK!!!**

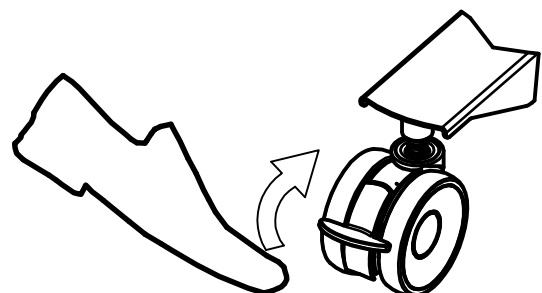


## Removing from palette

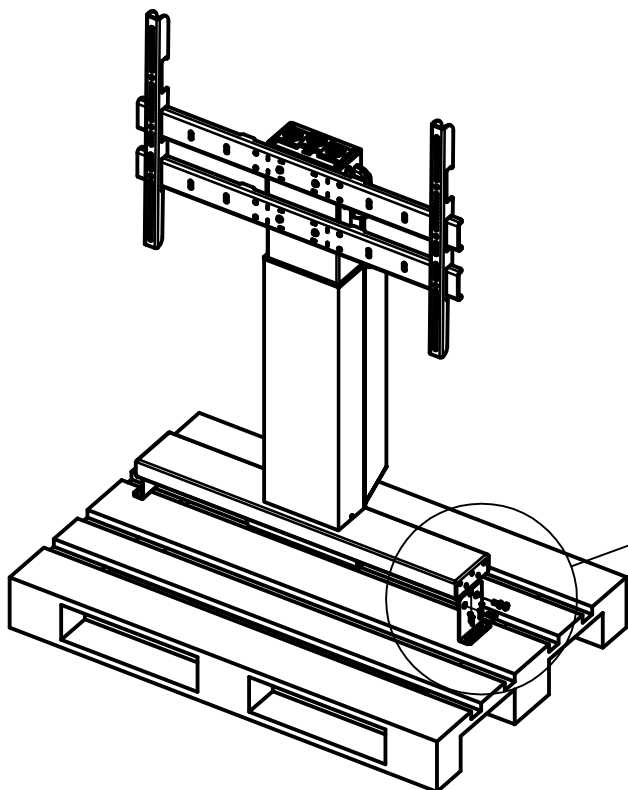

Remove the screws and angle bars and take off the TV lift from the transport palette

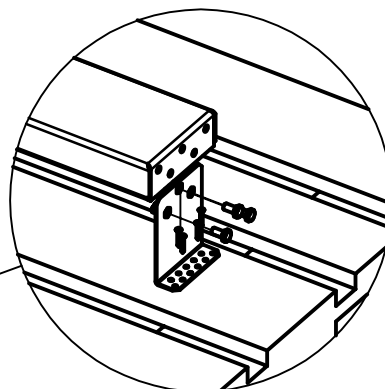


## Legs assembling

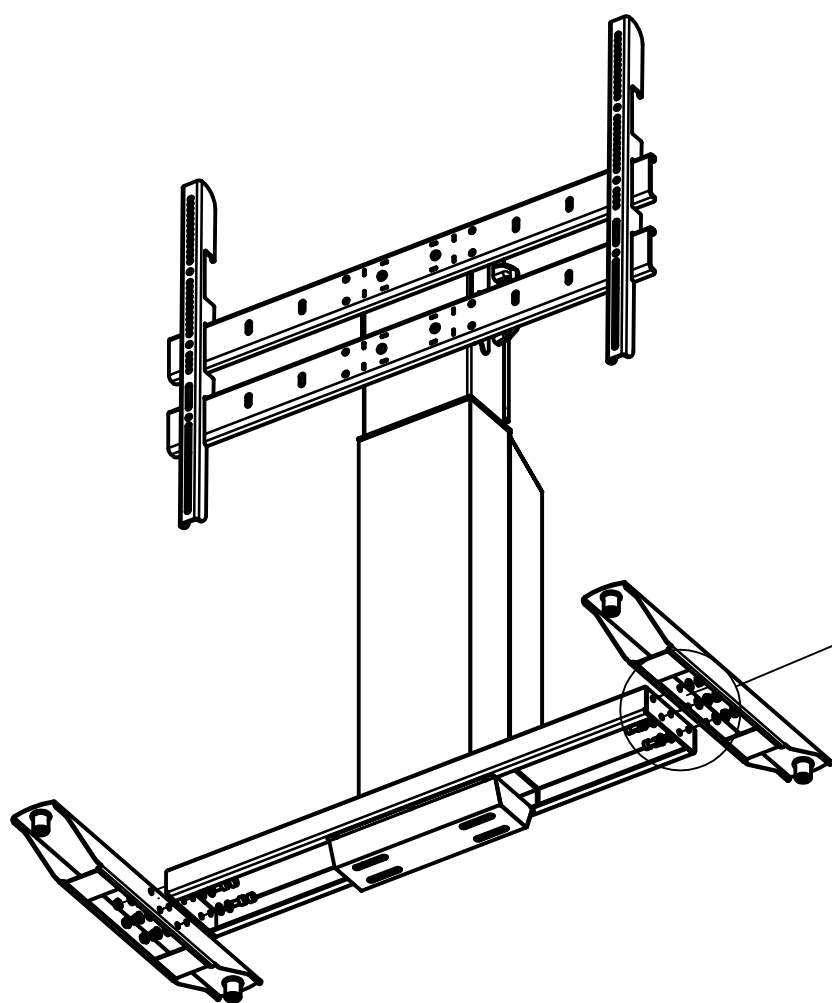

5x ISO10511-M8



5x ISO7089-8

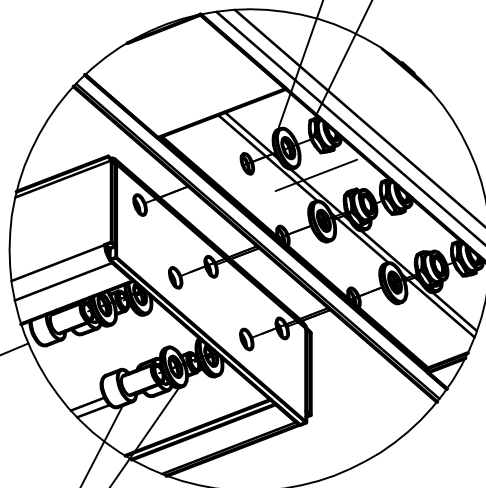


5x ISO7089-8



5x ISO4762-M8x15




## Wheels mounting process

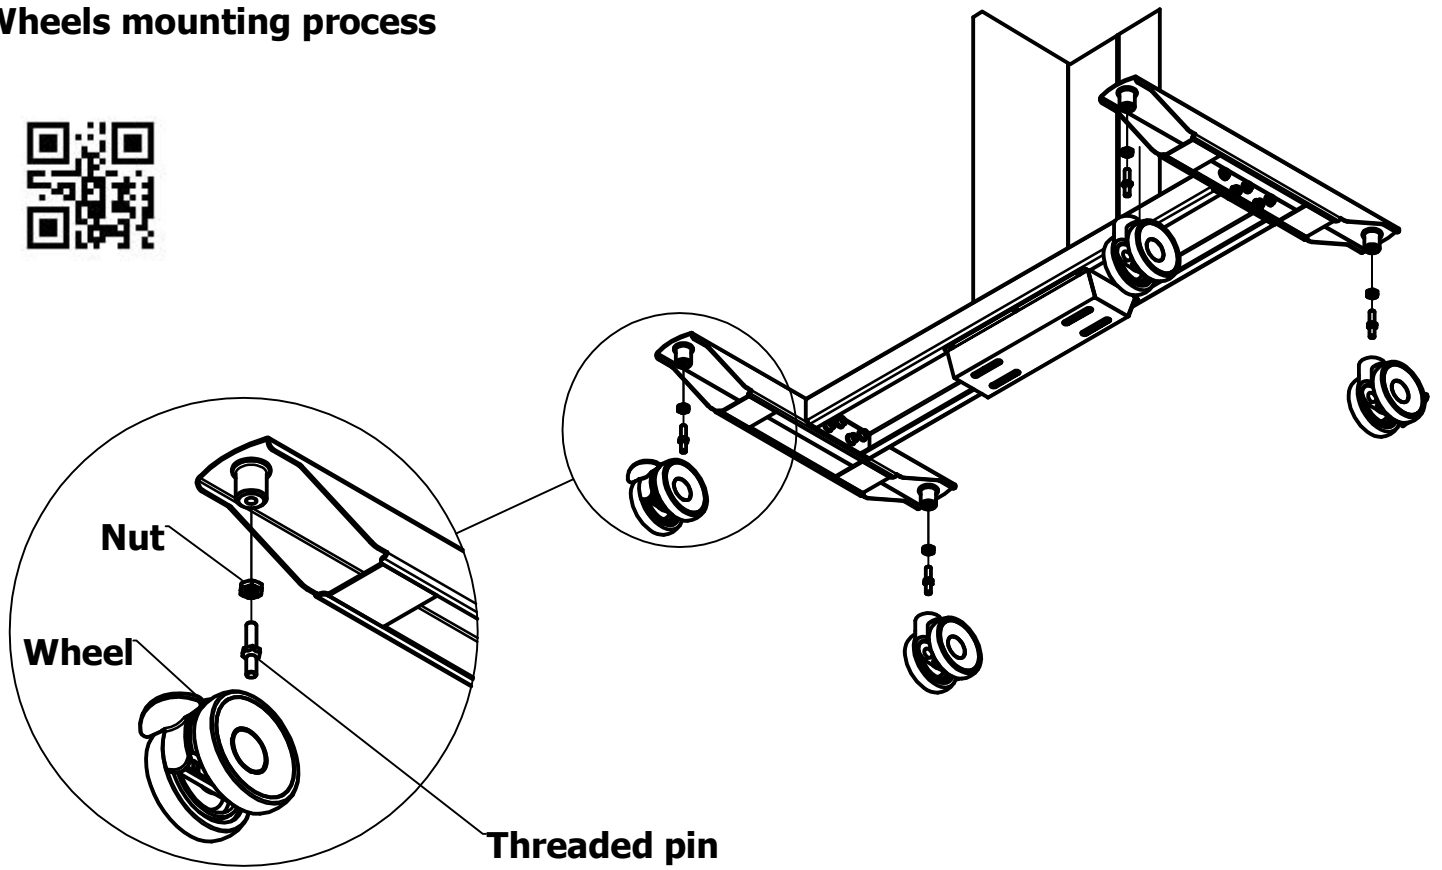


## Lift Leveling


Spanner 17mm

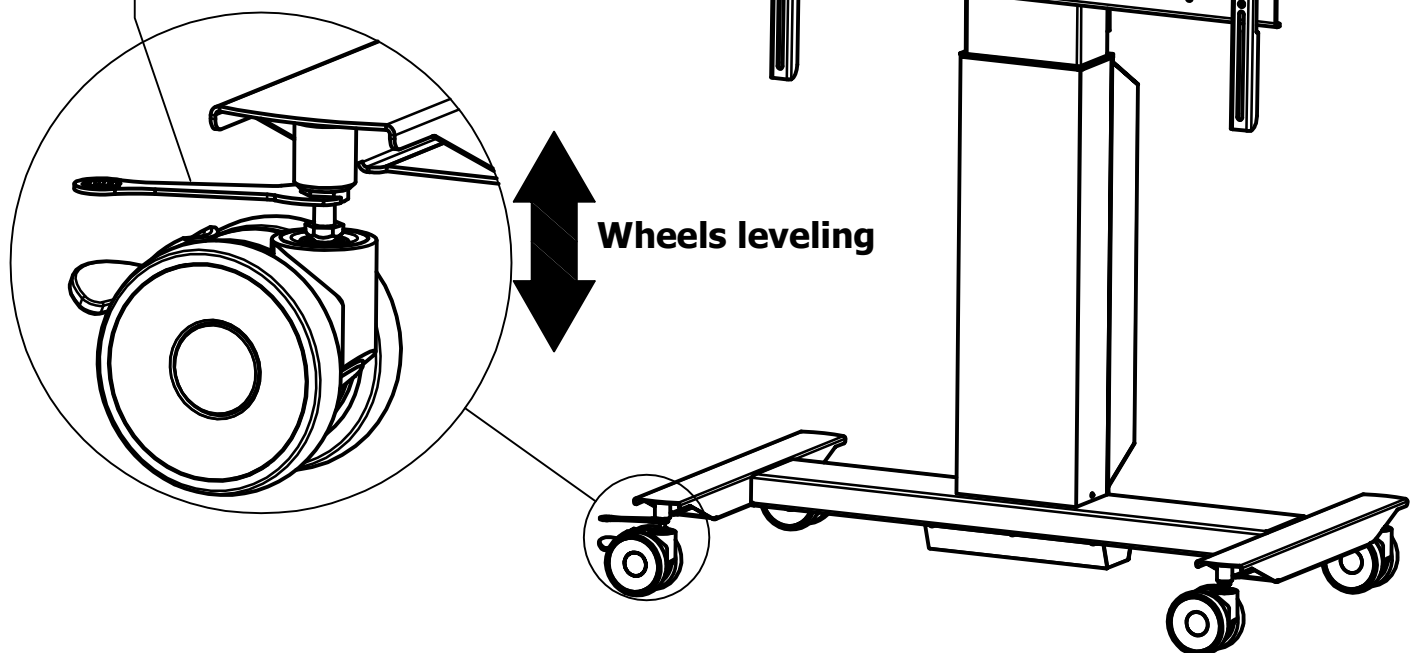


## Screen Mounting process

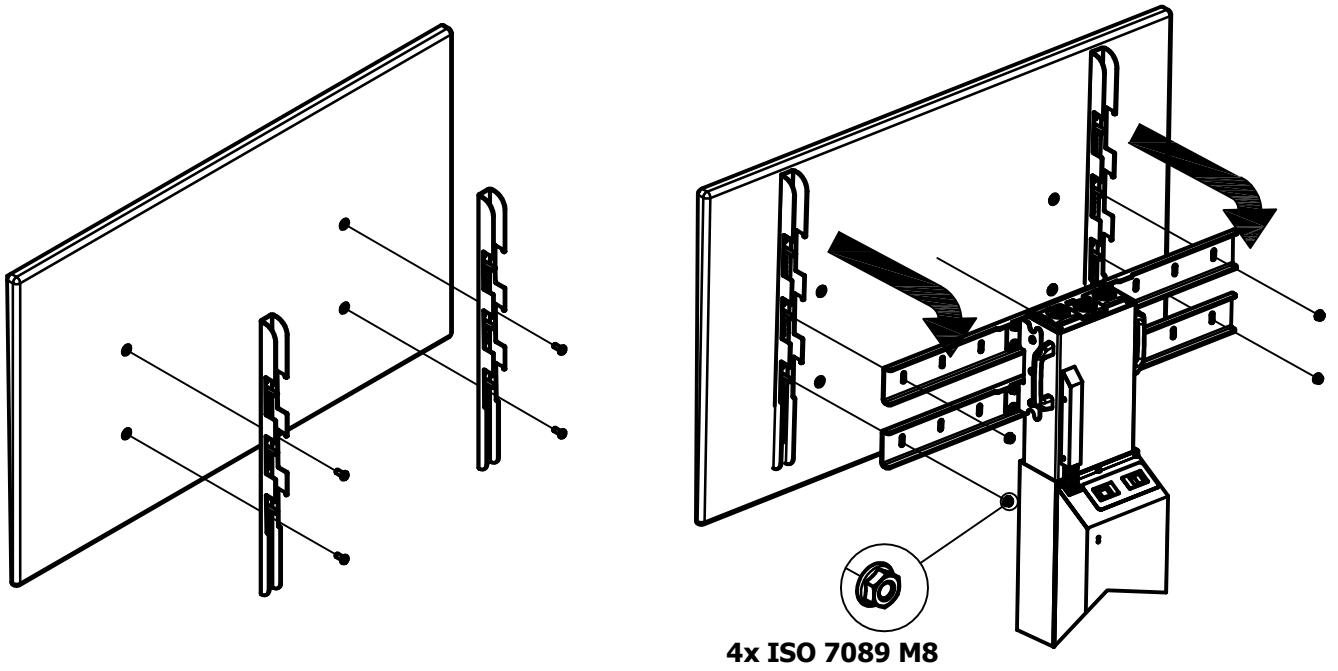

## Remote control holder mounting process

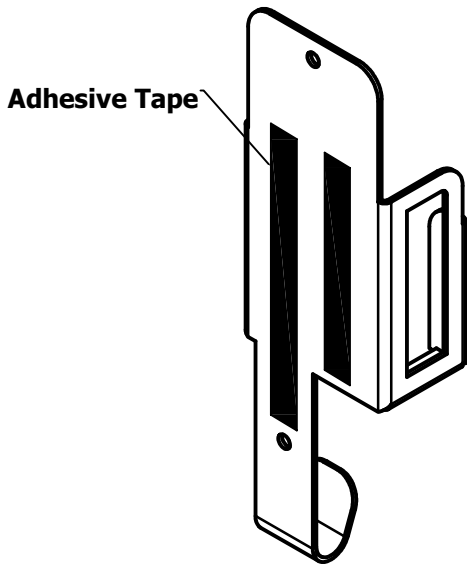


Hang Remote

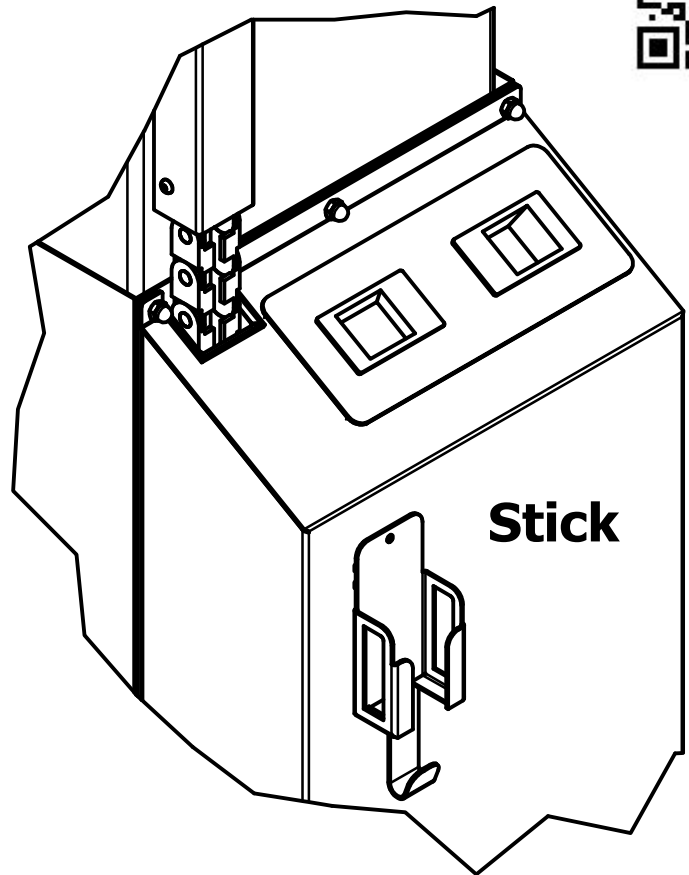

# Lubrication - Recommended once a year



## 1. Lubrication in the down position.

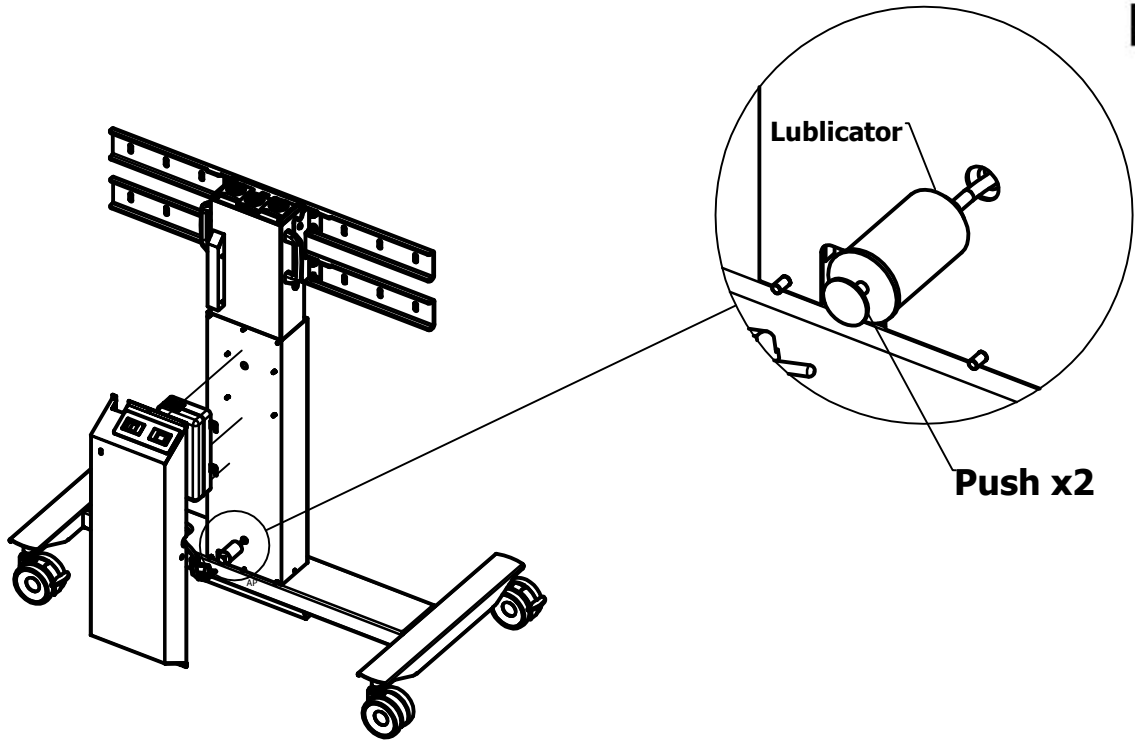

## 2. Lubrication in the top position.

